


Thank you for purchasing your HelmetSecure™ helmet lock. We want you to be delighted with your new lock and to enjoy using it often. The lock is simple to fit to your motorcycle handlebar and the following safety warnings and instructions will help ensure that you use the lock safely.

IMPORTANT SAFETY WARNINGS

- The lock fits motorcycles with handlebars 7/8" and 1" and 1 1/4" in diameter. It does not fit other sized bars, bars which are tapered, or motorcycles where the bars clip on to the forks (most sportbikes).
- Do not install and use the lock unless it fits tightly and securely to the handlebar.
- Position the lock toward the center line of the motorcycle, for example above the forks and between the risers.
- Position the lock where it will not foul any parts of the motorcycle, for example the instruments, cables or tank.
- Test the lock in position. Move the bars to full lock in each direction to check that you have chosen a location for the lock that will not affect the safe operation of the motorcycle under all conditions. If you have any doubt about the safety of your installation, consult a qualified mechanic for advice before proceeding.
- Always lock the cable, with the cable coiled, when operating the motorcycle.
- Never operate the motorcycle with a helmet locked to the lock.
- Failure to follow these instructions may impair the proper functioning and safe use of the motorcycle and may result in damage, injury or death.


Your HelmetSecure lock consists of the following parts:

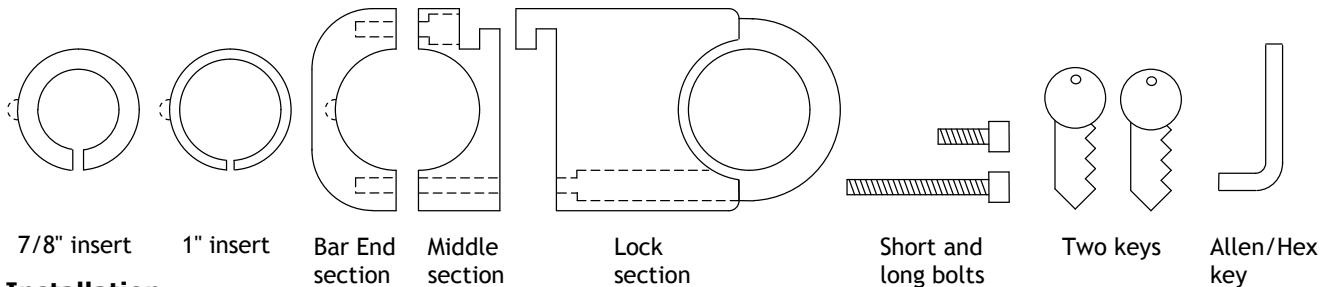

Installation


Your lock comes bolted together as a unit. Start by disassembling the lock by using the key to unlock the lock, withdraw the free end of the cable, use the included Allen/Hex key to unbolt the lower (long) bolt, slide off the lock section, and unbolt the upper (short) bolt to separate the bar end section from the center section.

Step 1. If you are fitting the lock to a 1 1/4" handlebar, go straight to Step 2. If you have a 1" or 7/8" bar, position the appropriate insert around the handlebar, with the dimple facing in the opposite direction to where the cable will be.

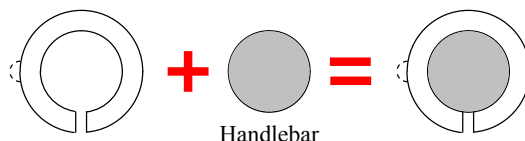



Step 2. If you have a 1 1/4" diameter handlebar, match up the bar end section and middle section around the handlebar. If you are using an insert, position the bar end section over the dimple and match up with the middle section around the handlebar.

If the two sections do not match up easily, turn the bar end section the other way up, and try again. Insert and fully tighten the short bolt into the upper bolt hole to secure the two sections. We recommend that you use a thread locking compound on the bolt (follow the manufacturer's instructions).

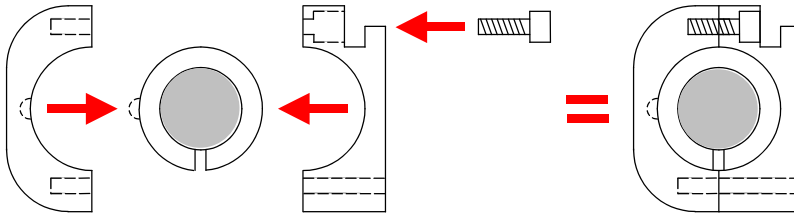

Step 3. Position the lock section over the end of the middle section and check that the whole lock will function safely before proceeding to Step 4.

Step 4. Ensure that the lock is unlocked and the free end of the cable has been removed from the lock. Insert the long bolt into the lower bolt hole and tighten fully. We recommend that you use a thread locking compound on the bolt (follow the manufacturer's instructions).

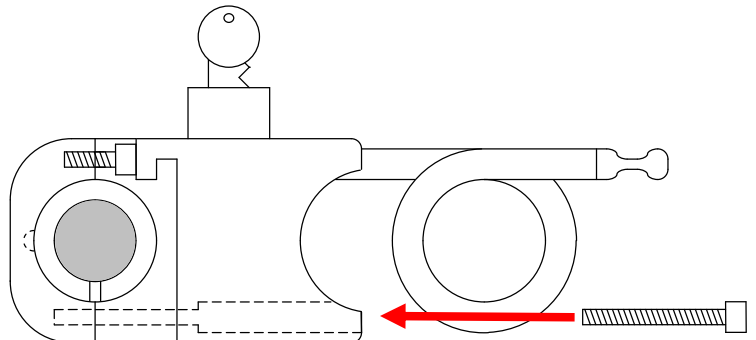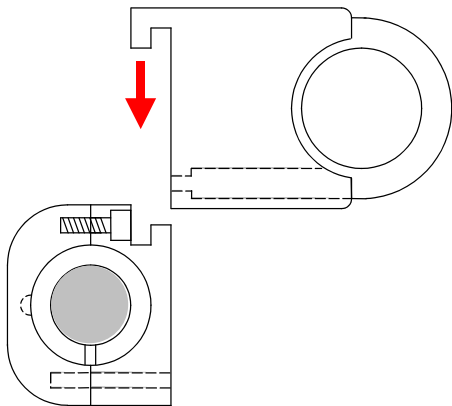

Operation of the lock

Use the key to lock/unlock the cable. The free end of the cable must be pushed fully into the receiving hole in order for the lock to engage properly.

Removing the lock from the handlebar

Unlock the lock, remove the free end of the cable, undo the lower bolt, remove the lock section, undo the top bolt and dismantle the remaining parts. Check that the lock is unlocked - if the lock is locked, the lock plunger will prevent the bolt from being removed.

Key Code

Make a note of the code shown on the keys - you will need that code to order replacement keys.

Additional Information

Website: www.helmetsecure.com. Email: info@helmetsecure.com. Tel: 415 674 8900.